

Load Bay Continuity Test PLC Input Connections

NOTE : To add Maintenance P.B. wire 28 to be run to term. 9 of the AX41 input card. Remove any connection between term. 9 and the other input-common terminals (18, 27, 36).

